


#### TV / LED STAND - G0223IT0020

#### Installation Instructions

- 1. This product should only be installed by someone who fully understand the installation instructions.
- 2. Make sure that the supporting surface will safely support the combined load of the equipment, hardware & components
- 3. Never exceed the maximum load capacity.
- 4. Always use assistant or mechanical lifting equipment, if needed, to safely lift & position equipment.
- 5. Tighten screws firmly, but do not over-tighten. Over-tightening can damage the screw & reduce their holding power
- This product is intended for indoor use only. Using this product outdoors could lead to product failure & personal injury.


## **Component Checklist**

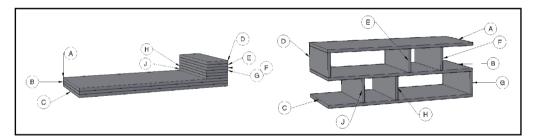

## **Installation Steps**

## STEP 1

## **FIX ALL Minifix-Screws and Minifix-Drums:**

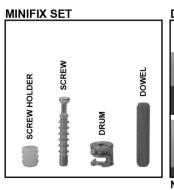


## DRUM INSERTING



Note: Make sure Drum inserting as same as above, Drum arrow direction at side surface hole side.

## **SCREW INSERTING**

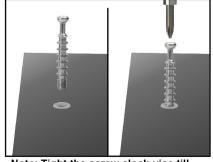


Note: Tight the screw clock-vise till the thread disappear.

## STEP 2

## **Unlock Mode:**

Note: Make sure all the given points otherwise it will not fix properly.

Minifix-Drum Arrow at Hole Side Before Inserting Minifix-Screw

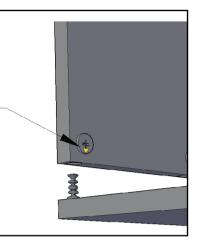


#### STEP 3

## **Lock Mode:**


Note: Use Key or Screw Driver.

Tight Minifix-Drum - Clock-wise Till It Stops and Fits properly

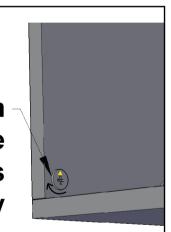


## STEP 4


# Connect D, E & F with B from Uperside and Connect G, H & J with B from Bottom side:

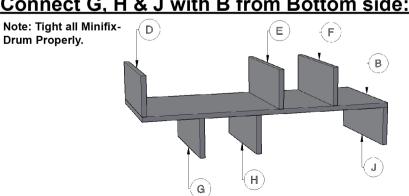

## STEP 5

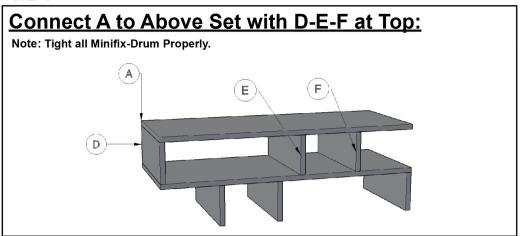

## STEP 6

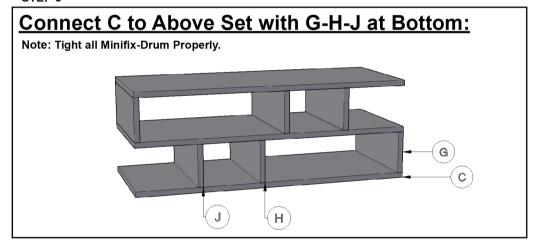



## **INSTALLATION GUIDE**

**TV / LED STAND - G0223IT0020**