


TV / LED STAND - G0223IT0019


Installation Instructions

- 1. This product should only be installed by someone who fully understand the installation instructions.
- 2. Make sure that the supporting surface will safely support the combined load of the equipment, hardware & components
- 3. Never exceed the maximum load capacity.
- 4. Always use assistant or mechanical lifting equipment, if needed, to safely lift & position equipment.
- 5. Tighten screws firmly, but do not over-tighten. Over-tightening can damage the screw & reduce their holding power
- This product is intended for indoor use only. Using this product outdoors could lead to product failure & personal injury.

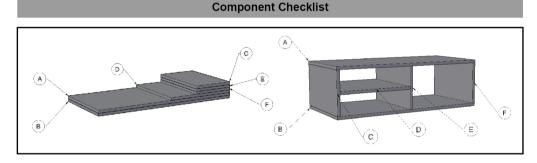

Installation Steps

STEP 1

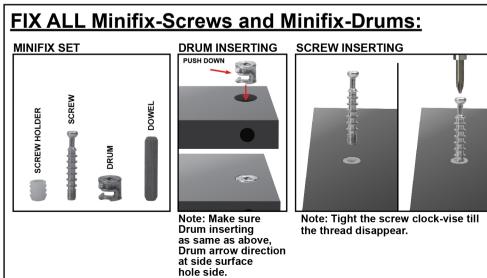


STEP 2

Unlock Mode:

Note: Make sure all the given points otherwise it will not fix properly.

Minifix-Drum Arrow at Hole Side Before Inserting Minifix-Screw

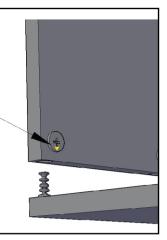


STEP 3


Lock Mode:

Note: Tight all Minifix-Drum Properly.

Tight Minifix-Drum Clock-wise Till It Stops and Fits properly

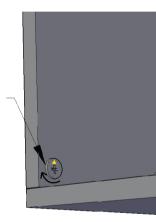


STEP 4

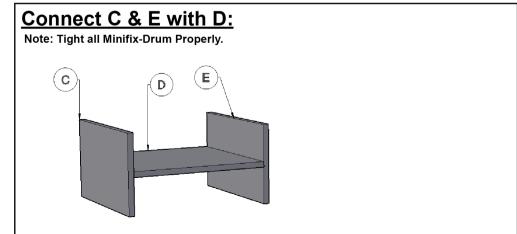


Connect B to Above Set with C & E at Bottom: Note: Tight all Minifix-Drum Properly.

STEP 6

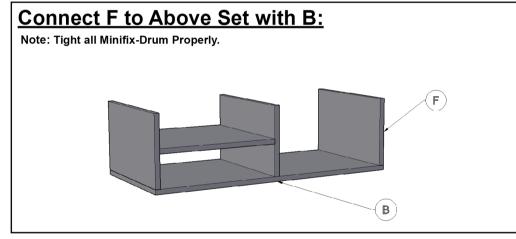

STEP 7

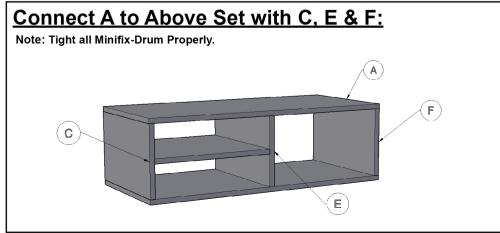



INSTALLATION GUIDE

TV / LED STAND - G0223IT0019