


### TV / LED STAND - G0223IT0019

### Installation Instructions

- 1. This product should only be installed by someone who fully understand the installation instructions.
- 2. Make sure that the supporting surface will safely support the combined load of the equipment, hardware & components
- 3. Never exceed the maximum load capacity.
- 4. Always use assistant or mechanical lifting equipment, if needed, to safely lift & position equipment.
- 5. Tighten screws firmly, but do not over-tighten. Over-tightening can damage the screw & reduce their holding power
- This product is intended for indoor use only. Using this product outdoors could lead to product failure & personal injury.


# **Component Checklist**

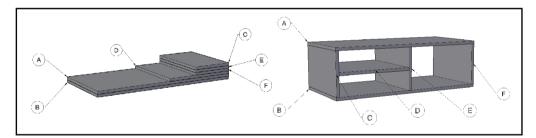

# **Installation Steps**

# STEP 1

# **FIX ALL Minifix-Screws and Minifix-Drums:**

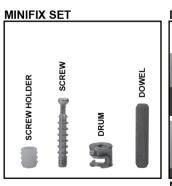


# DRUM INSERTING



Note: Make sure Drum inserting as same as above, Drum arrow direction at side surface hole side.

# **SCREW INSERTING**

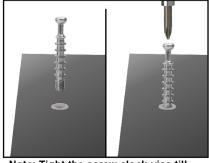


Note: Tight the screw clock-vise till the thread disappear.

# STEP 2

# **Unlock Mode:**

Note: Make sure all the given points otherwise it will not fix properly.

Minifix-Drum Arrow at Hole Side Before Inserting Minifix-Screw

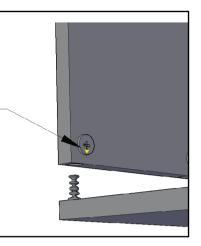


### STEP 3

# **Lock Mode:**


Note: Tight all Minifix-Drum Properly.

Tight Minifix-Drum - Clock-wise Till It Stops and Fits properly

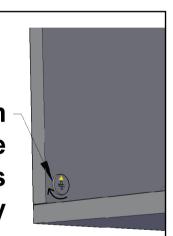


# STEP 4


# Connect C & E with D: Note: Tight all Minifix-Drum Properly.

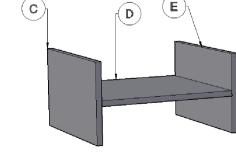


STEP 5

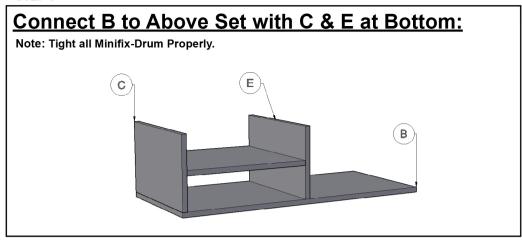

# STEP 6

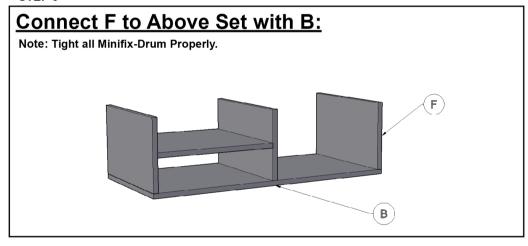

# STEP 7

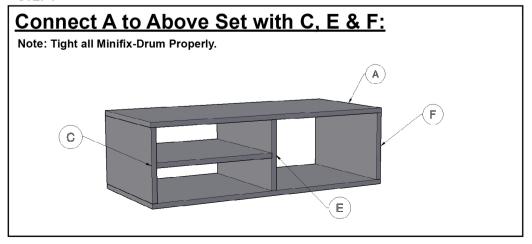



# **INSTALLATION GUIDE**

**TV / LED STAND - G0223IT0019**