


### TV Unit - G0223IT0030

### Installation Instructions

- 1. This product should only be installed by someone who fully understand the installation instructions.
- 2. Make sure that the supporting surface will safely support the combined load of the equipment, hardware & components
- 3. Never exceed the maximum load capacity.
- 4. Always use assistant or mechanical lifting equipment, if needed, to safely lift & position equipment.
- Tighten screws firmly, but do not over-tighten. Over-tightening can damage the screw & reduce their holding power
- This product is intended for indoor use only. Using this product outdoors could lead to product failure & personal injury.

### **Component Checklist**

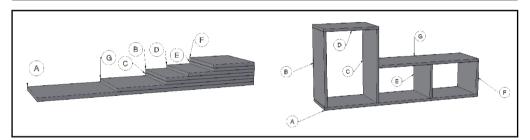

### **Installation Steps**

### STEP 1

**MINIFIX SET** 

# FIX ALL Minifix-Screws and Minifix-Drums:


# SCREW HOLDER SCREW DRUM DOWEL

### DRUM INSERTING



Note: Make sure Drum inserting as same as above diagram.

### **SCREW INSERTING**

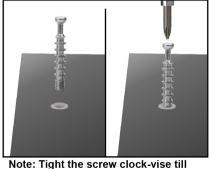


Note: Tight the screw clock-vise til the thread disappear.

### STEP 2

# **Unlock Mode:**

Note: Make sure all the given points otherwise it will not fix properly.

Minifix-Drum
Arrow at Hole
Side Before
Inserting Minifix-Screw

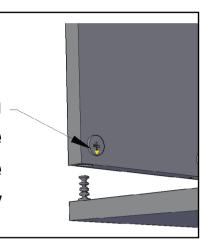


### STEP 3

## **Lock Mode:**

Note: Use Key or Screw Driver.


# Tight Minifix-Drum Clock-wise Till It Stops and Fits properly

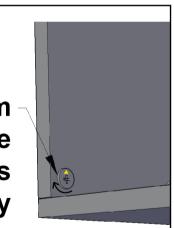

### STEP 4

# Connect B, C, E & F with A as below diagram: Note: Tight all Minifix-Drum Properly.

STEP 5

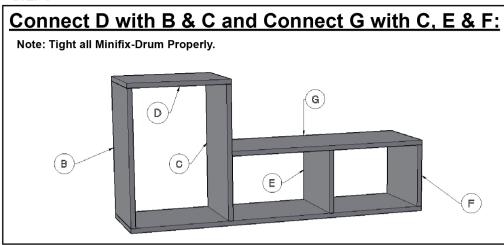



# **INSTALLATION GUIDE**

**TV UNIT - G0223IT0030**