


### **TV / LED STAND - G0223IT0189**

### Installation Instructions

- 1. This product should only be installed by someone who fully understand the installation instructions.
- Make sure that the supporting surface will safely support the combined load of the equipment, hardware & components
- 3. Never exceed the maximum load capacity.
- 4. Always use assistant or mechanical lifting equipment, if needed, to safely lift & position equipment.
- Tighten screws firmly, but do not over-tighten. Over-tightening can damage the screw & reduce their holding power
- 6. This product is intended for indoor use only. Using this product outdoors could lead to product failure & personal injury.

### **Component Checklist**

 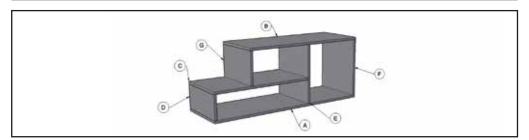


### **Installation Steps**

### STEP 1


### **FIX ALL Minifix-Screws and Minifix-Drums:**

## SCREW HOLDER SCREW SCREW DRUM DOWEL



Note: Make sure Drum inserting as same as above, Drum arrow direction at side surface hole side.

### **SCREW INSERTING**

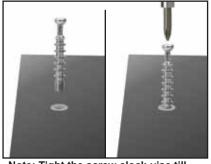

Note: Tight the screw clock-vise till the thread disappear.


### STEP 2

# Unlock Mode: Note: Make sure all the given points otherwise it will not fix properly. Minifix-Drum Arrow at Hole Side Before Inserting Minifix-Screw


### STEP 3




### STEP 4

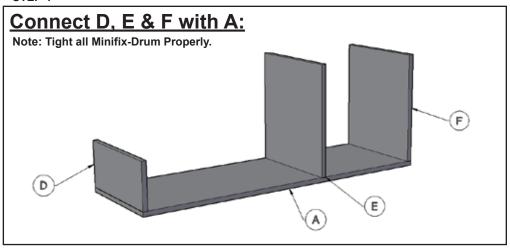


STEP 5

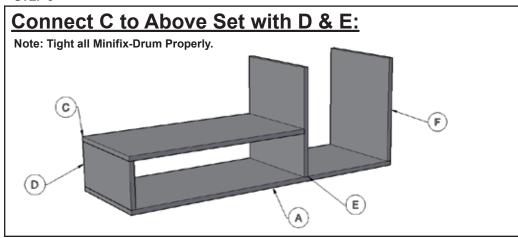

STEP 6

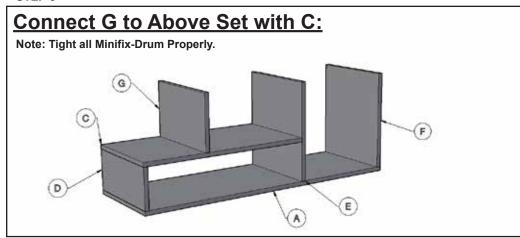

STEP 7

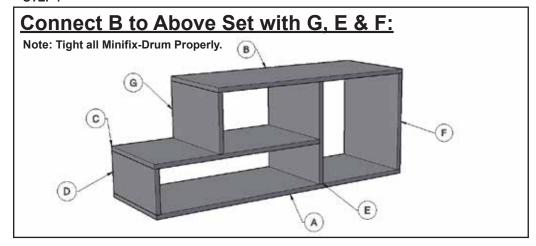



### **INSTALLATION GUIDE**

**TV / LED STAND - G0223IT0189** 

### G0223IT0189

