


TV UNIT - G0223IT0279

Installation Instructions

- 1. This product should only be installed by someone who fully understand the installation instructions.
- 2. Make sure that the supporting surface will safely support the combined load of the equipment, hardware & components
- 3. Never exceed the maximum load capacity.
- 4. Always use assistant or mechanical lifting equipment, if needed, to safely lift & position equipment.
- Tighten screws firmly, but do not over-tighten. Over-tightening can damage the screw & reduce their holding power
- 6. This product is intended for indoor use only. Using this product outdoors could lead to product failure & personal injury.

Component Checklist

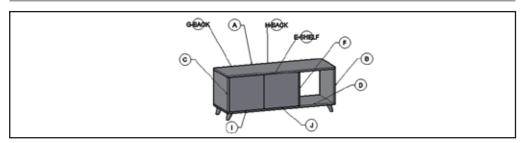

Installation Steps

STEP 1

FIX ALL Minifix-Screws and Minifix-Drums:


SCREW HOLDER SCREW DRUM DRUM

DRUM INSERTING



Note: Make sure Drum inserting as same as above, Drum arrow direction at side surface hole side.

SCREW INSERTING

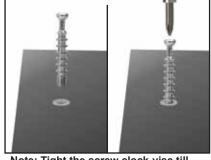


Note: Tight the screw clock-vise till the thread disappear.

STEP 2

Unlock Mode:

Note: Make sure all the given points otherwise it will not fix properly.

Minifix-Drum
Arrow at Hole
Side Before
Inserting Minifix-Screw

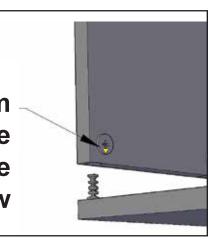


STEP 3

Lock Mode:


Note: Tight all Minifix-Drum Properly.


Tight Minifix-Drum
Clock-wise
Till It Stops
and Fits properly

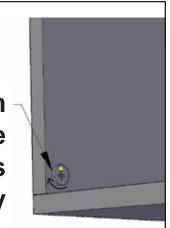


STEP 4

Connect C, E, F & B With Above Set With D: Note: Tight all Minifix-Drum Properly. Connect Legs With D. F-SHELF

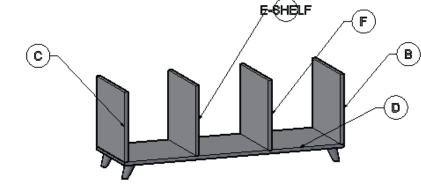


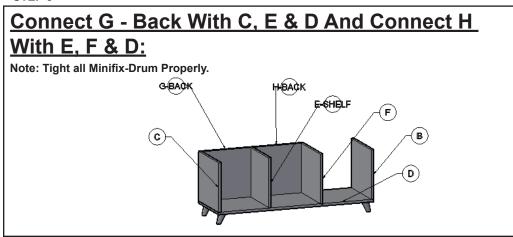

STEP 6

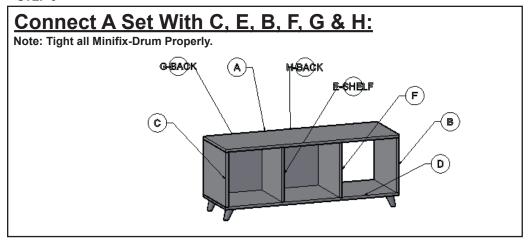

STEP 7

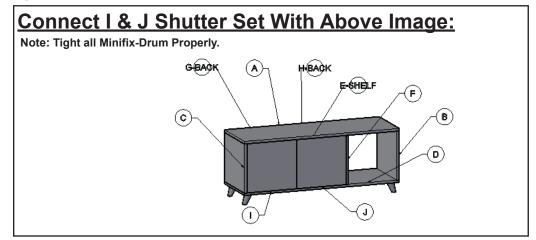



INSTALLATION GUIDE

TV UNIT - G0223IT0279

G0223IT0279

