


### **OLITE COMPUTER TABLE** G0223IT0339 / G0223IT0427 / G0223IT0428

#### Installation Instructions

- 1. This product should only be installed by someone who fully understand the installation instructions.
- 2. Make sure that the supporting surface will safely support the combined load of the equipment, hardware
- 3. Never exceed the maximum load capacity.
- 4. Always use assistant or mechanical lifting equipment, if needed, to safely lift & position equipment.
- 5. Tighten screws firmly, but do not over-tighten. Over-tightening can damage the screw & reduce their
- 6. This product is intended for indoor use only. Using this product outdoors could lead to product failure & personal injury.

### **Component Checklist**

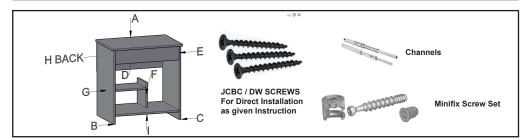

### **Installation Steps**

### STEP 1

### FIX ALL Minifix-Screws and Minifix-Drums:





Note: Make sure Drum inserting as same as above, Drum arrow direction at side surface hole side.

### **SCREW INSERTING**



Note: Tight the screw clock-vise till the thread disappear.


### STEP 2


## **Unlock Mode:** Note: Make sure all the given points otherwise it will not fix properly. Minifix-Drum **Arrow at Hole Side Before Inserting Minifix-Screw**

### STEP 3




### STEP 4

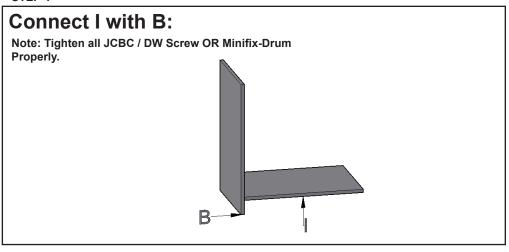


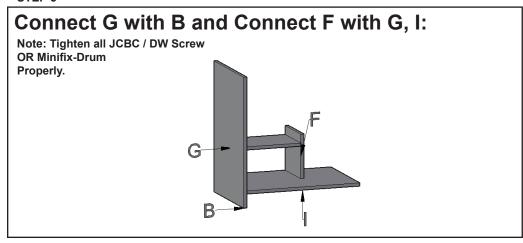

### STEP 6

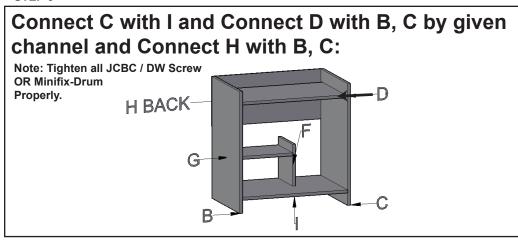

### STEP 7

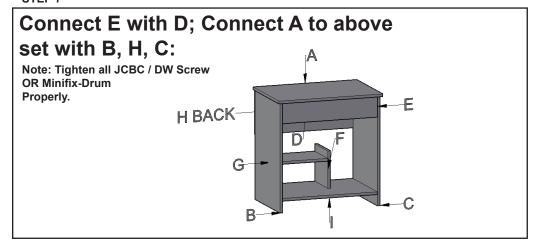



### **INSTALLATION GUIDE**

OLITE COMPUTER TABLE G0223IT0339 / G0223IT0427 / G0223IT0428

# Having Problems with INSTALLATION??? Got a Broken Part??? | DON'T WORRY !!



